



Custom Colonial Shutter Installation Instructions For All Shutter Styles

Step 1. Shutter positioning. (Figures 1 & 2)

Using a shutter as a template, place the shutter on the building and mark the 6 mounting holes.

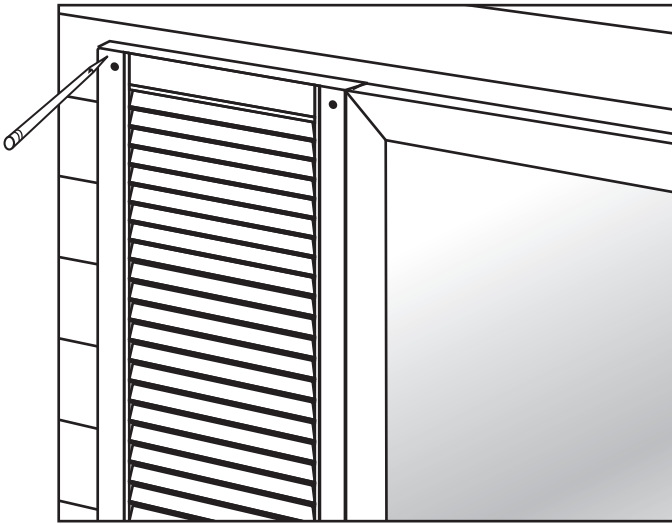

(Figure 1)

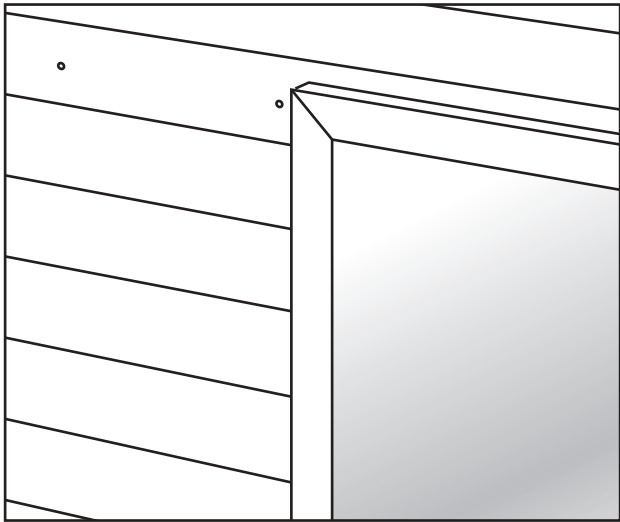

(Figure 2)


Step 2. Install shutters. (Figure 3)

Reposition shutters over the template markings and attach shutters to the wall using the six color coordinated aluminum screws provided with each pair of shutters.

The pre-painted aluminum screws are equipped with a self-drilling tip and a square socket head (Figure 4). The use of a #2 square drive bit is recommended.

Note: Correct installation requires the use of all six (6) screws.

Caution: Do not over tighten the screws.

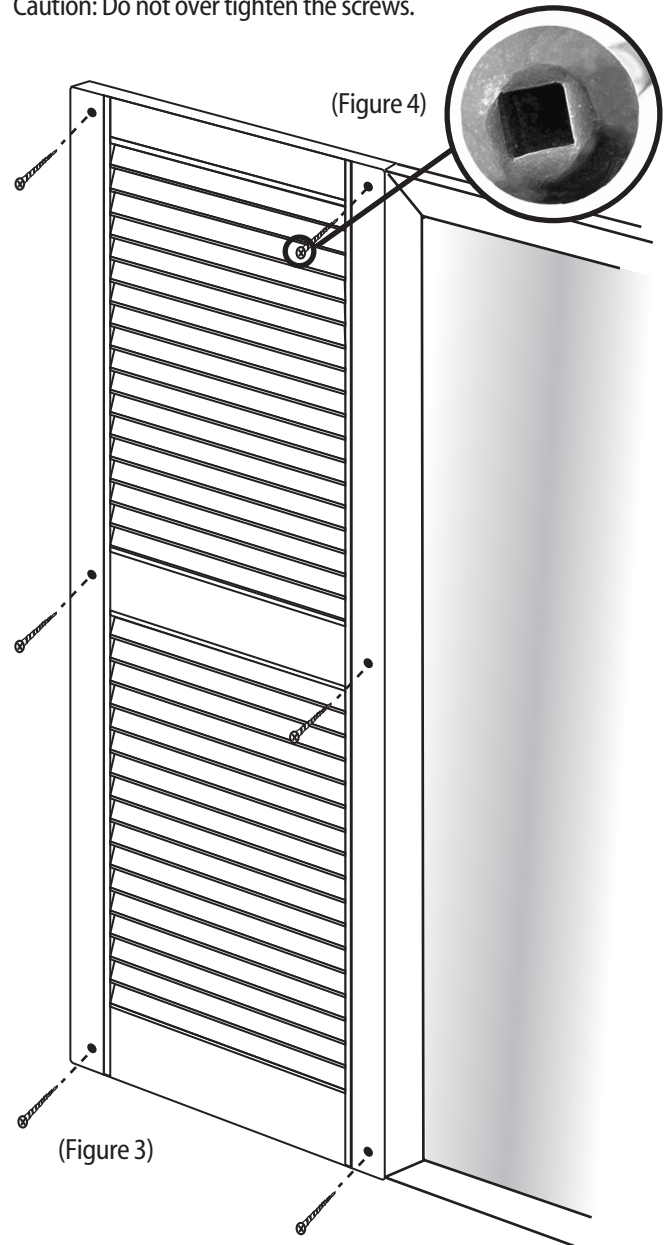

(Figure 3)



Girardin Moulding, Inc.
567 Halfway House Road, Windsor Locks, CT 06096